Desire I5 - Upgrading RAM

- Unplug the terminal
- Remove the 5 screws holding on the back panel



Side Screws



Base Screw




- Remove the back panel
- Move the current RAM stick to the lower socket, (there are two stacked on top of each other).



- Install the new RAM in the top socket.
 - The default RAM is 2GB 1.5 volt 1600mhz
 - It supports 1 or 2 DIMM's up to a total of 8GB
 - It supports 1333Mhz and 1600Mhz mixing speeds is not recommended but if you do it will operate at the slower speed

Installing System Memory

DIMMA1/B1: Memory Module (204pin SO-DIMM)

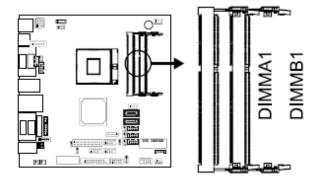

⊳Note

- » If the DIMM does not go in smoothly, do not force it. Pull it all the way out and try again.
- Align a DIMM on the slot such that the notch on the DIMM matches the break on the Slot.
- Insert the DIMM firmly into the slot until the retaining chip snap back in place and the DIMM is properly seated.
 - Replace the rear case
 - Connect power supply and startup terminal
 - Confirm the PC is detecting the extra RAM.
 - Shown on the boot screen, in BIOS and in Windows under Start>Control Panel>System