



# NC-1250 WIRELESS BARCODE SCANNER Quick Start Guide

## How do you program your scanner?


1.Scan Start Configuration

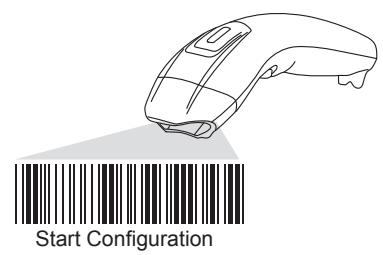

2.Scan all necessary able for parameters that Meet your application

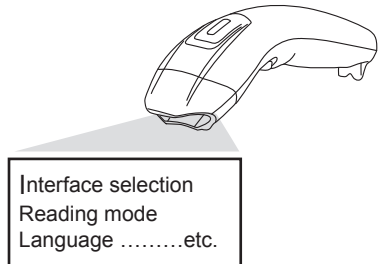

3.Scan end configuration to save the changes.

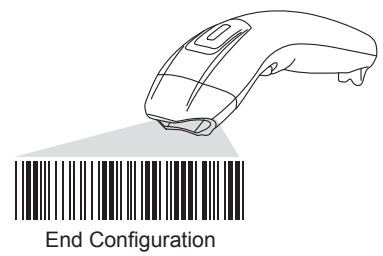

## Resetting The Standard Product Defaults


If you aren't sure what programming options are in your scanner, or you've changed some options and want the factory settings restored, scan the bar code below.




## Symbologies setting

- Enable	- Disable
* UPC-A on	UPC-A off
* UPC-E on	UPC-E off
* EAN13 on	EAN13 off
* EAN8 on	EAN8 off
* Code39 on	Code39 off
* Codabar on	Codabar off
* Code93 on	Code93 off
* Code128 on	Code128 off
Interleaved 2 of 5 on	* Interleaved 2 of 5 off
Industrial 2 of 5 on	* Industrial 2 of 5 off
Matrix 2 of 5 on	* Matrix 2 of 5 off
MSI/Plessey on	* MSI/Plessey off
Code32 on (Italian Pharma Code)	*Code32 off (Italian Pharma Code)
Code11 on	*Code11 off
Telepen on	*Telepen off
GS1 DataBar Omnidirectional on	*GS1 DataBar Omnidirectional off
GS1 DataBar Limited on	*GS1 DataBar Limited off
GS1 DataBar Expanded on	*GS1 DataBar Expanded off


## Before Getting Started

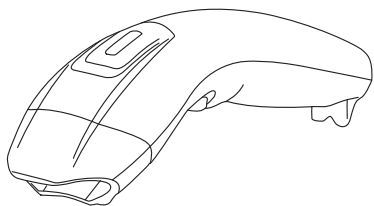


Wireless Scanner

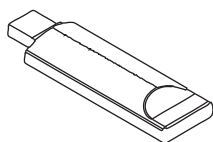


USB Receiver

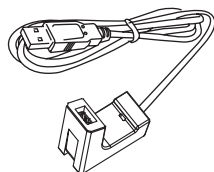

USB docking station

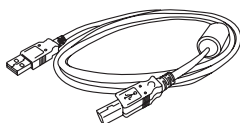

USB recharge cable

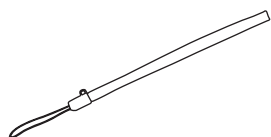

Strap

## About your wireless scanner

It is one on one wireless data communication protocol. The scanner is already paired with the USB receiver. Just easily plug USB receiver and start the operation. The scanner on a real time basis, if the scanner is connected, the barcode is decoded and transmitted to the remote host without any delay. If the scanner is not connected or out of range, the data is lost (status: 2 beeps/4 beeps).

**Note:**  
New batteries should be fully charged before their first use

## Wake up your wireless scanner

Press and release the trigger on your scanner to activate it. Your scanner is ready to work when orange LED comes on.

## Connect USB receiver to a host computer

The device can be quickly recognized by host computer without any software/driver installation. Within less than 10 seconds the receiver will flash red to inform the Initialization is completed.

## Recharging the battery

The Red LED comes on when the battery level is low, please recharge the scanner immediately. When the scanner is charging, the LED is green (solid). A full recharge (from completely drained battery) takes approximately 4 hours. When the scanner is fully charged, the green LED will go off.

## How to pair (repair) you scanner and receiver?

Step 1: Plug the USB receiver to the scanner  
Step 2: Trigger the button on the scanner.  
Step 3: Devices are successful paired with 1 beep from scanner and 1 blink from the USB receiver.

## Scanner LED indicator

Status / indicator	Beeper	Blue LED	Green LED	Red LED	Orange LED
Good Scan	1 beep	1 blink			
Transmission failure	4 beeps	4 blink			
Transmission failure (in memory mode)	2 beeps	2 blink			
Low battery				On	
Recharge			On		
Operation mode					On
Sleeping	None	None	None	None	None

## USB receiver LED indicator

Color	Indication
Red	LED will flash to present the success of transmission

## Default setting of wireless scanner

- Buzzer : High
  - Vibrator: Disable
  - Memory mode: Disable
  - Power saving (sleep mode): 10min
- The default values can be modified by scanning the following options.

**Note:** Please scan the following barcode directly with your USB receiver on. No need to scan start and end configuration barcodes.

### <Buzzer>



\*High



Low



Off

### <Vibration motor>



Enable



\*Disable

### <Memory mode>



\*Disable



Enable

### <Sleep mode>



\*10min



30min



always on

### <Dongle interface selection >

Scan the interface you wish to use and replug the USB receiver to active the new setting.



\* HID-USB



USB-COM

## HID USB Keyboard Country

Scan the appropriate country code below to program the keyboard for your country. As a general rule, the following characters are supported, but need special care for countries other than the United States: @ | \$ # { } [ ] = / ' \ < > ~

**Note:** Please scan the following barcode directly with your USB receiver on. No need to scan start and end configuration barcodes.



US



German



Italian



Danish



Spanish



Japanese



French



Turkey



Portuguese



Finnish



Czech



Dutch



Belgian



Norwegian



Swedish



Swiss

## Terminator selection



\* CR+LF



CR



Tab



LF