





## NC-1200 Setup For QuickPos – Quick Setup Guide


Please scan each barcode starting from the top.

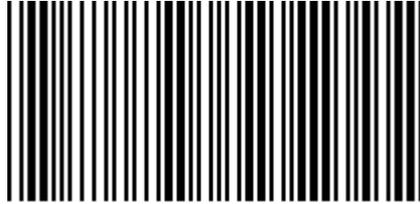


\*%+M7-1\*

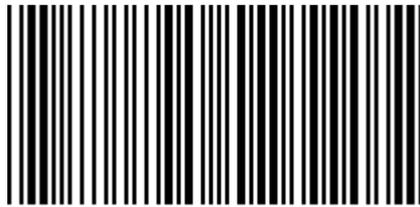

\*%+E4AS\*

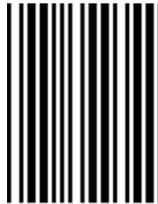

\*7\*

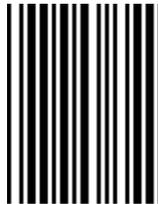

\*E\*



\*%+M7-6\*



\*%+M7-5\*